































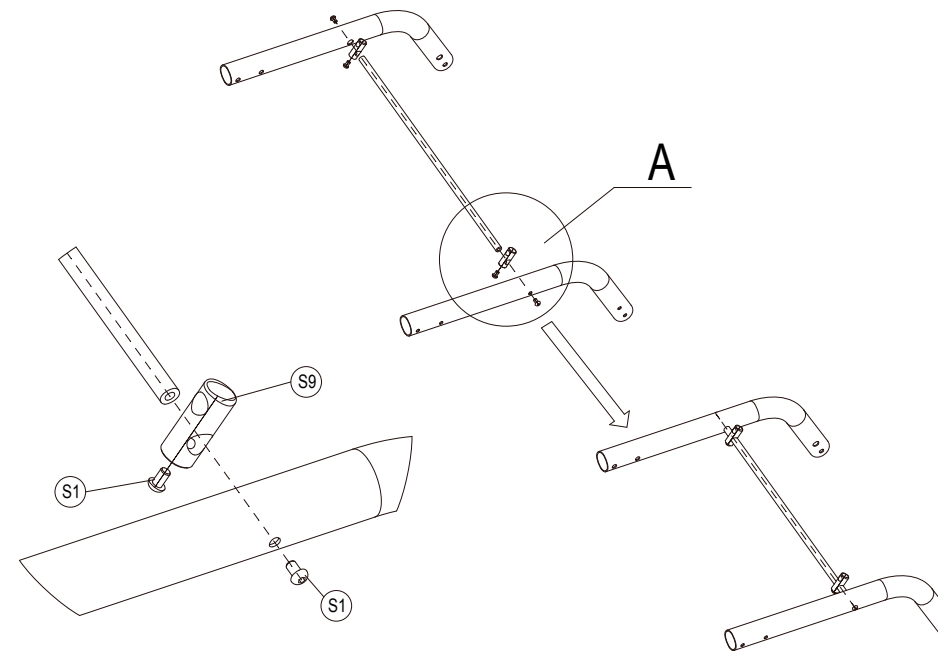


Material List






No.	Screw	Q'ty	Screw Picture	No.	Screw	Q'ty	Screw Picture
M1	Ø10*110	2		S1	M6*10	48	
M2	Ø10*143	2		S2	M8*25	2	
M3	Ø10*177	2		S3	M6*10	4	
M4	Ø10*255	2		S4	M6*6	2	
M5	Ø12*70	2		S5	M6*28	6	
M6	Ø10*101	2		S6	nut M6	4	
M7	Ø10*133	2		S7	M6*40	2	
M8	Ø10*50	2		S8	Ø16*38	2	
M9	Ø10*80	2		S9	Ø16*53	2	
M10	Ø12*60	2		S10	Ø14*34	2	
M11	Ø9*35.2	10		S11	M6*15	10	
M12	Ø10*82	2		S12	M6*16	10	
				S13	nut M6	4	
				S14	M5*16	2	
				3#	1		
				4#	1		
				5#	1		


Step 1.

No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S1	M6*10	4		4#	
S9	Ø16*53	2			






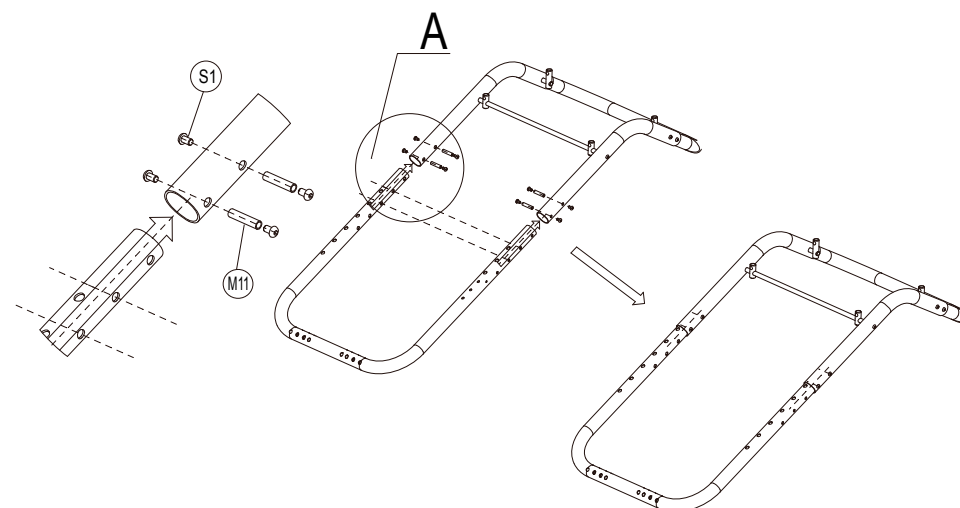
Step 2.

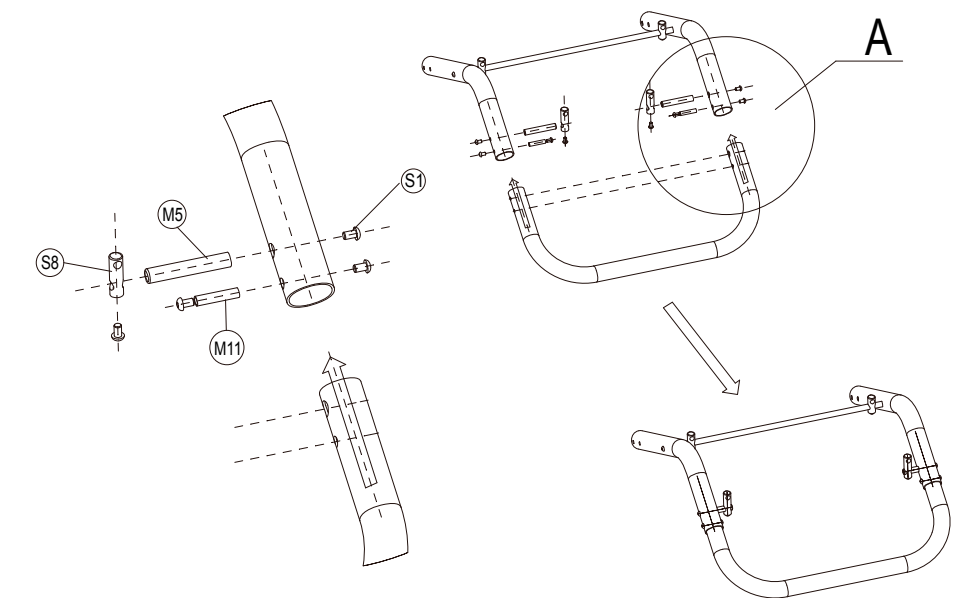No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S1	M6*10	8		4#	
M11	Ø9*35.2	2			
S8	Ø16*38	2			
M5	Ø12*70	2			








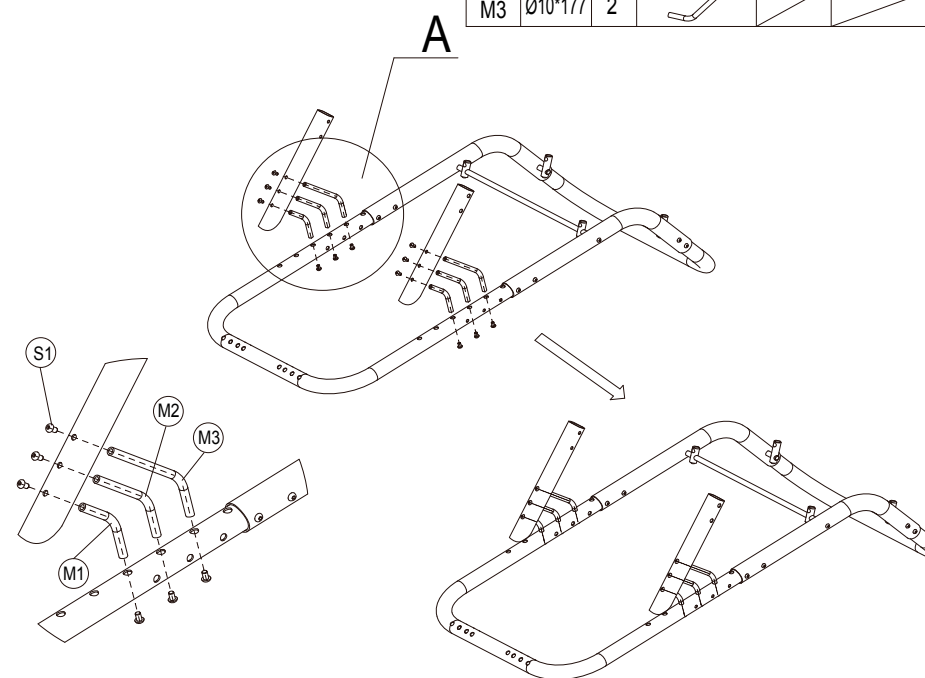
Step 3.

No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S1	M6*10	8		4#	
M11	Ø9*35.2	4			






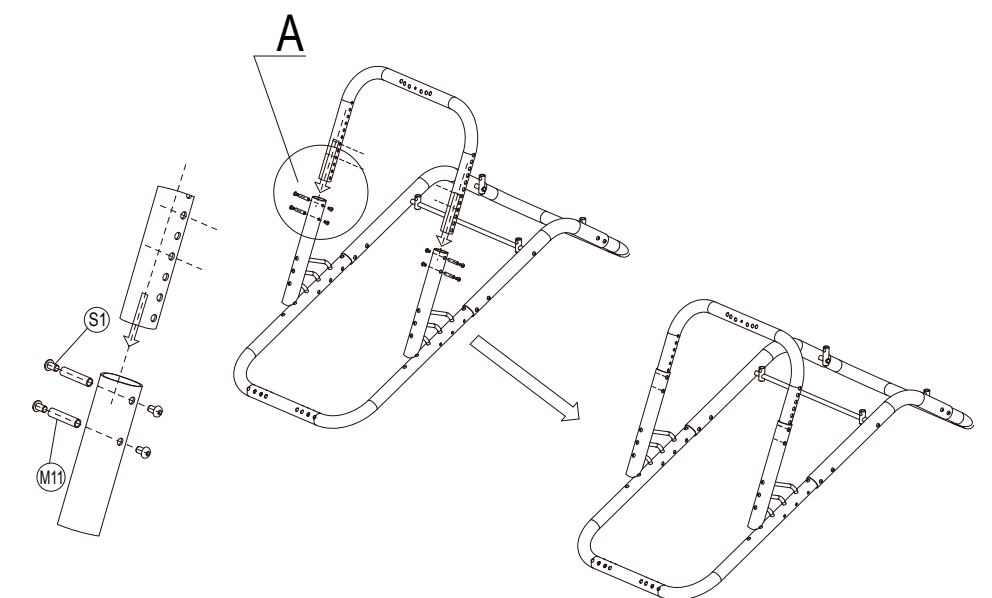
Step 4.

No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S1	M6*10	12		4#	
M1	Ø10*110	2			
M2	Ø10*143	2			
M3	Ø10*177	2			









Step 5.

No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S1	M6*10	8		4#	
M11	Ø9*35.2	4			














Step 6.

No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S1	M6*10	4		4#	
S11	M6*15	4			
M6	Ø10*101	2			
M7	Ø10*133	2			

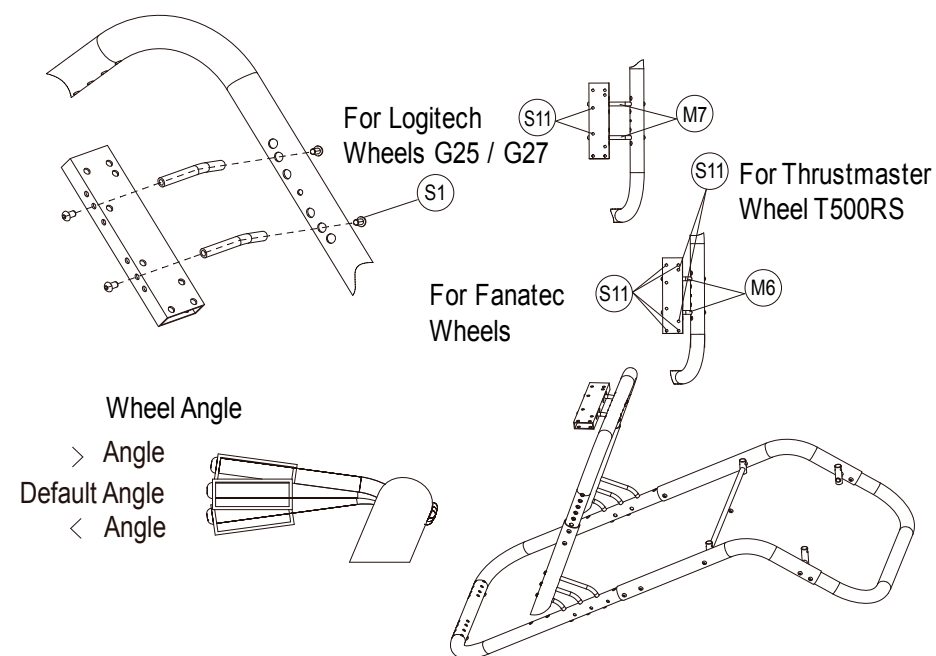


Step 7.

No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S1	M6*10	2		4#	
S5	M6*28	2			
S3	M6*10	4		3#	
S11	M6*15	4			
S4	M6*6	2			
S10	Ø14*34	2			
M12	Ø10*82	2			
S13	nut M6	4			

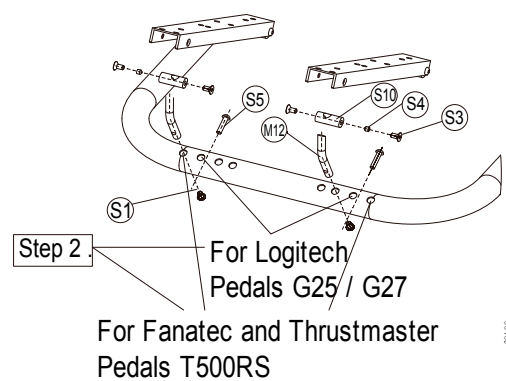



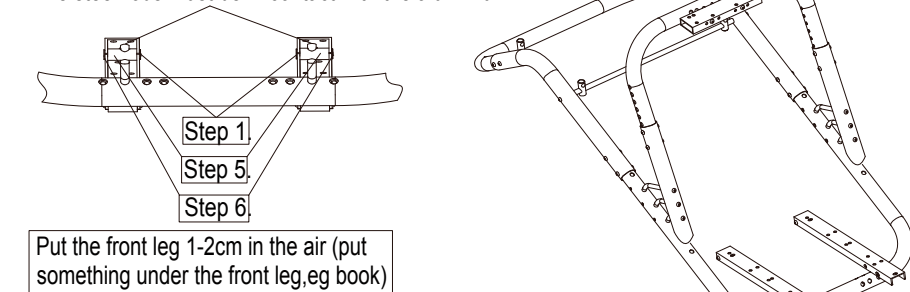






Step 4.
The steel rods must be in contact with the aluminium.




Step 1. Use screw S3 to screw S10 with the pedal holder at inside first.
Step 2. Install M12 into Tube with S1 (M6*10), S5 (M6*28) at correct position by your pedal type.
Step 3. Install your pedal on the pedal holder with screw S11 (M6 x 15), 2 or 4 pcs by your pedal type and position of screw hole.
Step 4. Install the pedal holder on the M12 and adjust the pedal holder's position and angle.
Step 5. Screw the set screw (S4) in M12 tightly with the pedal holder.
Step 6. Use screw S1 to screw pedal holder with M12 on outside.

Step 8.

No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S1	M6*10	2		4#	
S12	M6*16	6			
S2	M8*25	2		5#	
M10	Ø12*60	2			
M8	Ø10*50	2			
M9	Ø10*80	2			
S14	M5*16	2			(for future CSS product)



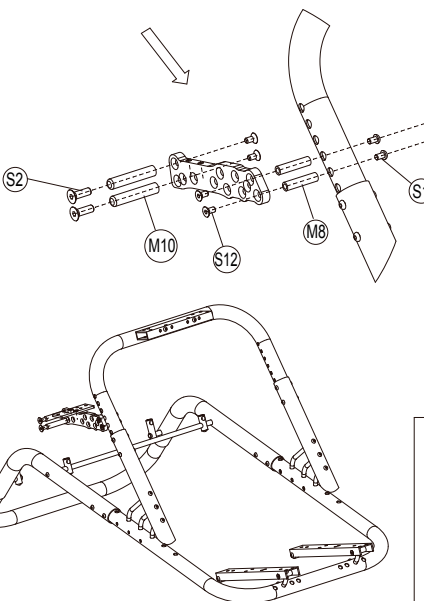

For Fanatec and Thrustmaster Shifter TH8RS




For Logitech Shifters G25 / G27




Position plan		
M8 or M9	1	1A
	2	2A
M10	3	3A
	4	4A
	5	5A


Step 9.

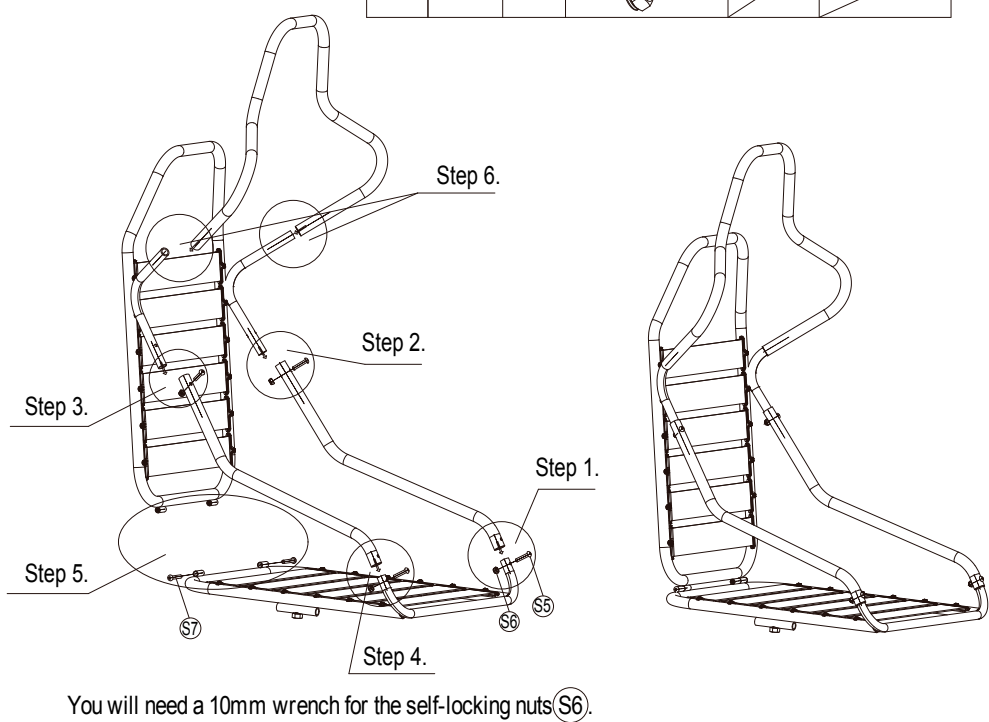No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S7	M6*40	2		4#	
S5	M6*28	4			
S6	nut M6	4			




Step 10.

No.	Screw	Q'ty	Screw Picture	Tool No.	Tool Picture
S12	M6*16	4		4#	
M4	Ø10*255	2			

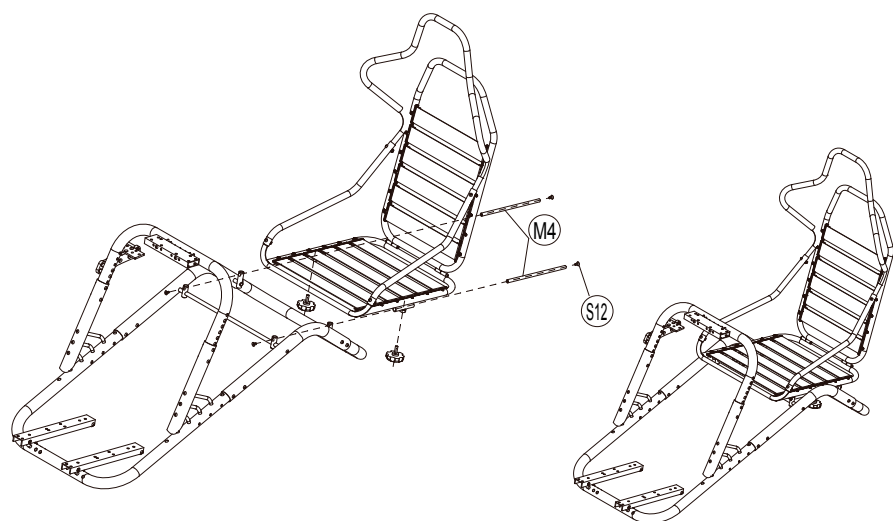

Step 11.

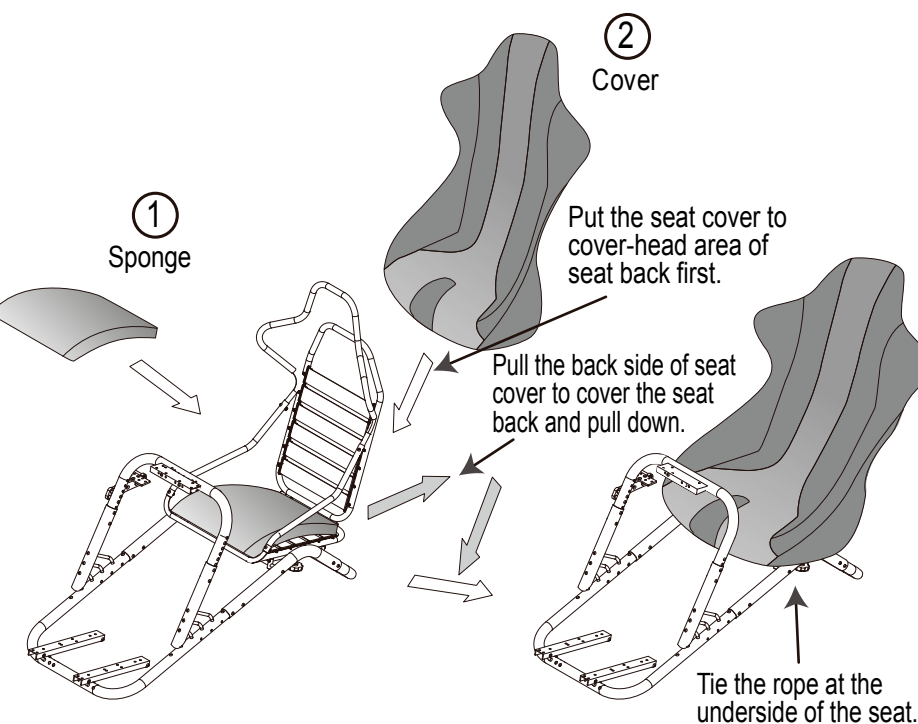

FANATEC®

WWW.FANATEC.COM